





## Drydecal


## upon coating

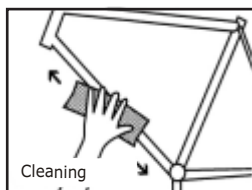


Be sure that the object has a minimal temperature of 16 degrees and the surface is clean, free from dust, grease and oxidations. To avoid problems you may use a degreaser like IPA or an other degreaser who's friendly for the used powdercoat finish.

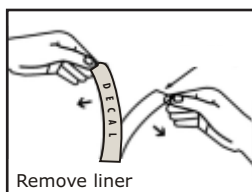


Remove the liner from the transfer carefully.

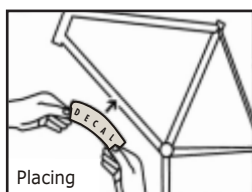

Find the right position with help of the printed register signs. After you are sure that the position is correct, you can put the decal on the surface. If there's an error you can remove the transfer easily with a heavy duty tape but don't wait to long because after a while the transfer will stick permanently.

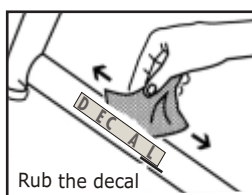

Rub the transfer, starting from the middle, carefully with some pressure. It's recommended to use dust free cotton gloves. Be sure you didn't forgot some places.

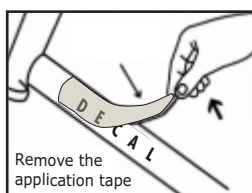

Remove the carrier foil. Inspect the decal.



UVDT does have a long shelf life. The duration of this shelf life depends of the conditions of your warehouse. Stored flat in the original packaging by room temperature with a humidity of approximately 50% will keep them useable for years.